

BaF₂ Barium Fluoride Scintillation Material

Right click to open our web site in your browser:
www.detectors.saint-gobain.com

Barium fluoride (BaF₂) is presently the fastest known scintillator. It has an emission component with subnanosecond decay time that yields very fast timing. Fast timing is required for positron lifetime studies, time of flight measurements, Positron Emission Tomography (PET) and certain high energy or nuclear physics applications. Using special electronics, time resolutions around 200 ps are possible for small detector geometries.

There are several new scintillators that also have excellent timing capabilities. These are BrillanCe™ 350, BrillanCe™ 380 and Prelude™ 420. Please see corresponding data sheets for each of these materials.

BaF₂ has several scintillation emission bands. The fast scintillation light is emitted in the UV in bands centered at 220 and 195nm. The decay time of the fast component varies between 600 and 800ps.

To detect the fast scintillation light, it is necessary to use a photomultiplier tube with a quartz entrance window. Furthermore, the optical coupling compound must have a good transparency for UV light. Usually silicon oils or compounds are used.

The self-absorption of the material is very low so that the use of large scintillation crystals is possible.

Next to the fast emission components, BaF₂ also emits a relatively slow scintillation component in a band centered at 310nm. The decay time of this component has an average value of 630ns.

Using quartz photomultiplier tubes for the detection of the scintillation light, about 15% of photoelectrons is produced by the fast component whereas 85% originates from the slow component (γ-rays). The total number of photons emitted from a BaF₂ crystal is about 12 per keV of photon energy.

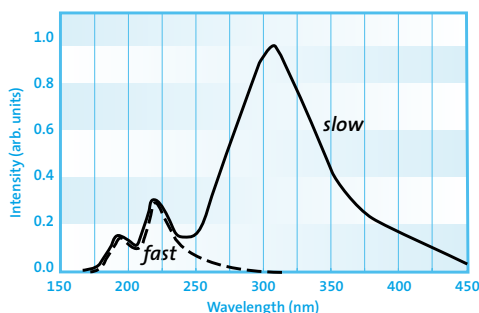


Figure 1. Scintillation emission spectrum of BaF₂

Properties –

Density [g/cm ³]	4.88
Melting point [K]	1627
Thermal expansion coefficient [C ⁻¹]	18.4 x 10 ⁻⁶
Cleavage plane	<111>
Hardness (Mho)	3
Hygroscopic	slightly
Wavelength of emission max. [nm]	310
	220(195)
Lower wavelength cutoff [nm]	135
Refractive index @ emission max	1.50 (310nm)
	1.54 (220nm)
Primary decay time [ns]	630 (slow)
	0.6 - 0.8 (fast)
Light yield [photons/keVγ]	10 (slow)
	1.8 (fast)
Photoelectron yield [% of NaI(Tl)] (for γ-rays)	
	16 (slow)
	3 (fast)



USA

Saint-Gobain Crystals
17900 Great Lakes Parkway
Hiram, OH 44234
Tel: (440) 834-5600
Fax: (440) 834-7680

Europe

Saint-Gobain Crystals
104 Route de Larchant
BP 521
77794 Nemours Cedex, France
Tel: 33 (1) 64 45 10 10
Fax: 33 (1) 64 45 10 01

P.O. Box 3093
3760 DB Soest
The Netherlands
Tel: 31 35 60 29 700
Fax: 31 35 60 29 214

Japan

Saint-Gobain KK, Crystals Division
3-7, Kojimachi, Chiyoda-ku,
Tokyo 102-0083 Japan
Tel: 81 (0) 3 3263 0559
Fax: 81 (0) 3 5212 2196

China

Saint-Gobain (China) Investment Co., Ltd
15-01 CITIC Building
19 Jianguomenwai Ave.
Beijing 100004 China
Tel: 86 (0) 10 6513 0311
Fax: 86 (0) 10 6512 9843

India

Saint Gobain Crystals and Detectors Ltd
India Delegation, Leela Business Park
Andheri Kurla Road
Mumbai 400059 India
Tel: 91 22 4021 2121
Fax: 91 22 4021 2102

www.detectors.saint-gobain.com

BaF₂ Barium Fluoride Scintillation Material

The ratio between the intensity of the fast and the slow scintillation components of BaF₂ depends on the ionizing power of the absorbed particle. This feature allows gamma discrimination and particle identification by pulse shape discrimination techniques. (References below.*)

The response of BaF₂ to neutrons up to 22MeV has been investigated. (Reference below**.)

The scintillation intensity of the fast component is independent of temperature between -40°C and 25°C. The slow component varies gradually with

temperature, attaining its maximum at -10°C. (V.Nanal et al., *Nuclear Instruments and Methods in Physics Research*, A389, 1997, 430-436).

BaF₂ is not hygroscopic, but condensing moisture can pit its surface. It is relatively radiation hard. Radiation doses of 10⁵ Gray (10⁷ rad) do not cause any severe damage to its scintillation characteristics.

References:

- * NIM A376 (1996) 108-212
NIM A312 (1992) 515-520
NIM A269 (1988) 595-598
- ** NIM A274 (1989) 501-506

Manufacturer reserves the right to alter specifications.

©2002-2012 Saint-Gobain Ceramics & Plastics, Inc. All rights reserved.

(02-12)